

**MOUNTING INSTRUCTIONS  
MONTAGEHANDLEIDING  
INSTRUCTION DE MONTAGE  
MONTAGEANLEITUNG  
ISTRUZIONI DI MONTAGGIO  
MANUAL DE MONTAJE**

---

Citroën Jumper / Peugeot Boxer / Fiat Ducato  
H2



---





Citroën Jumper / Peugeot Boxer / Fiat Ducato


H2

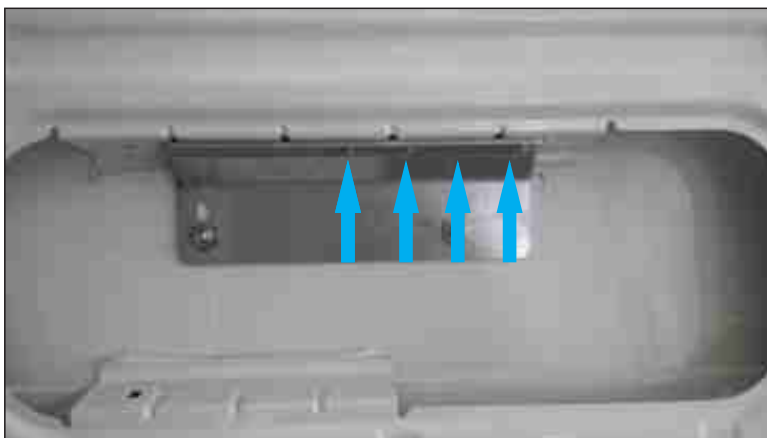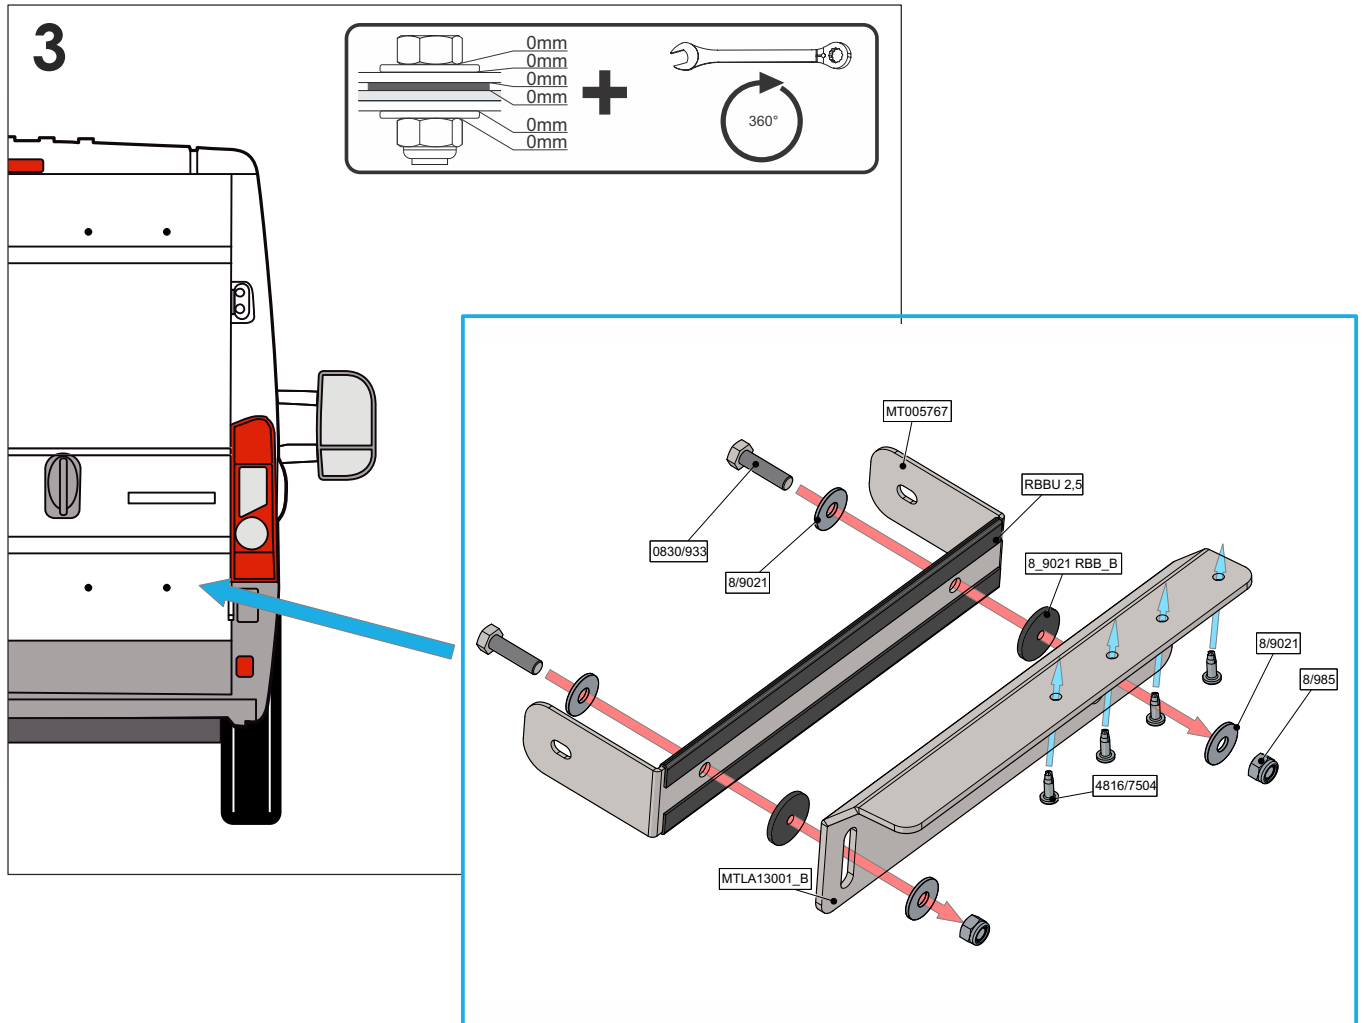

self-tapping screws  
zelftappende schroeven  
vis autotaraudeuses  
selbstschneidende Schrauben  
viti autofilettanti  
tornillos autorroscantes

Citroën Jumper / Peugeot Boxer / Fiat Ducato

H2

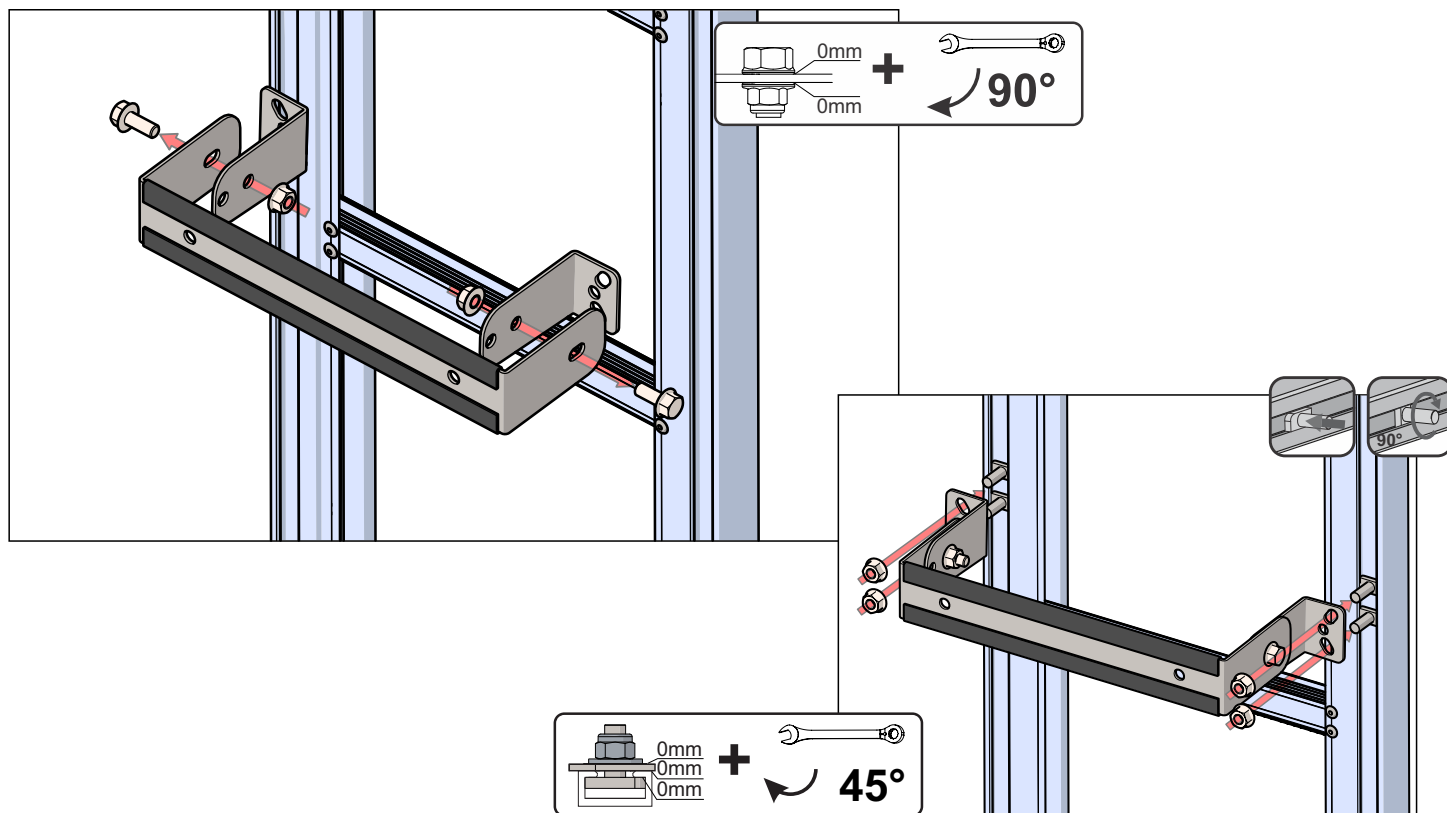


**MOUNTING INSTRUCTIONS  
MONTAGEHANDLEIDING  
INSTRUCTION DE MONTAGE  
MONTAGEANLEITUNG  
ISTRUZIONI DI MONTAGGIO  
MANUAL DE MONTAJE**


---

Citroën Jumper / Peugeot Boxer / Fiat Ducato  
Opel Movano > 2021



---

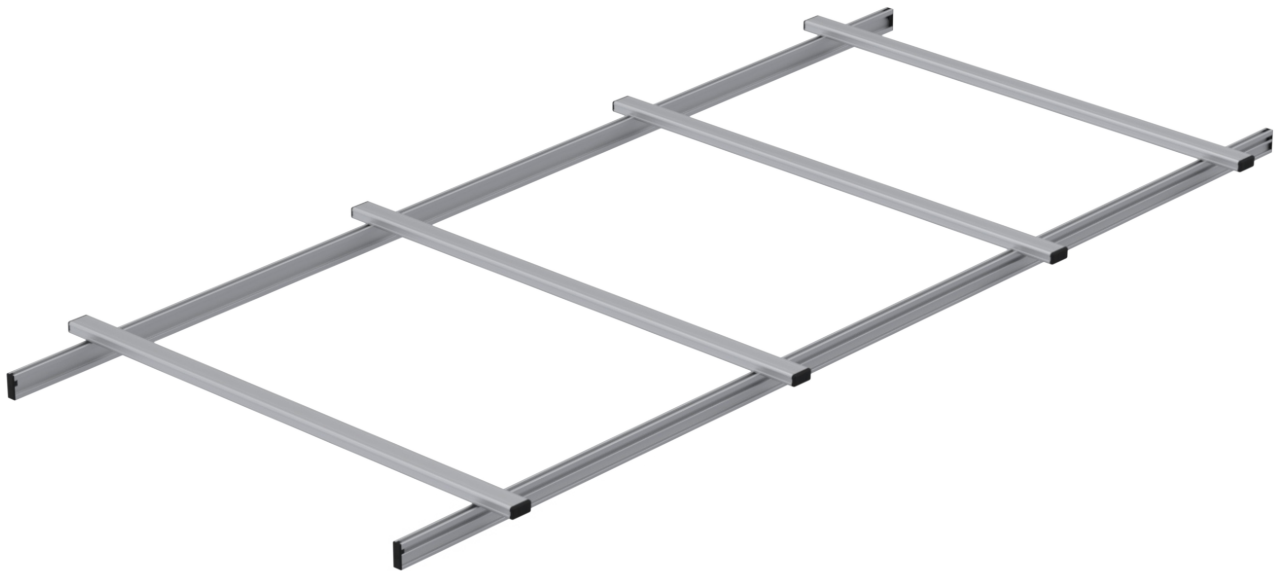

Citroën Jumper / Peugeot Boxer / Fiat Ducato  
Opel Movano > 2021

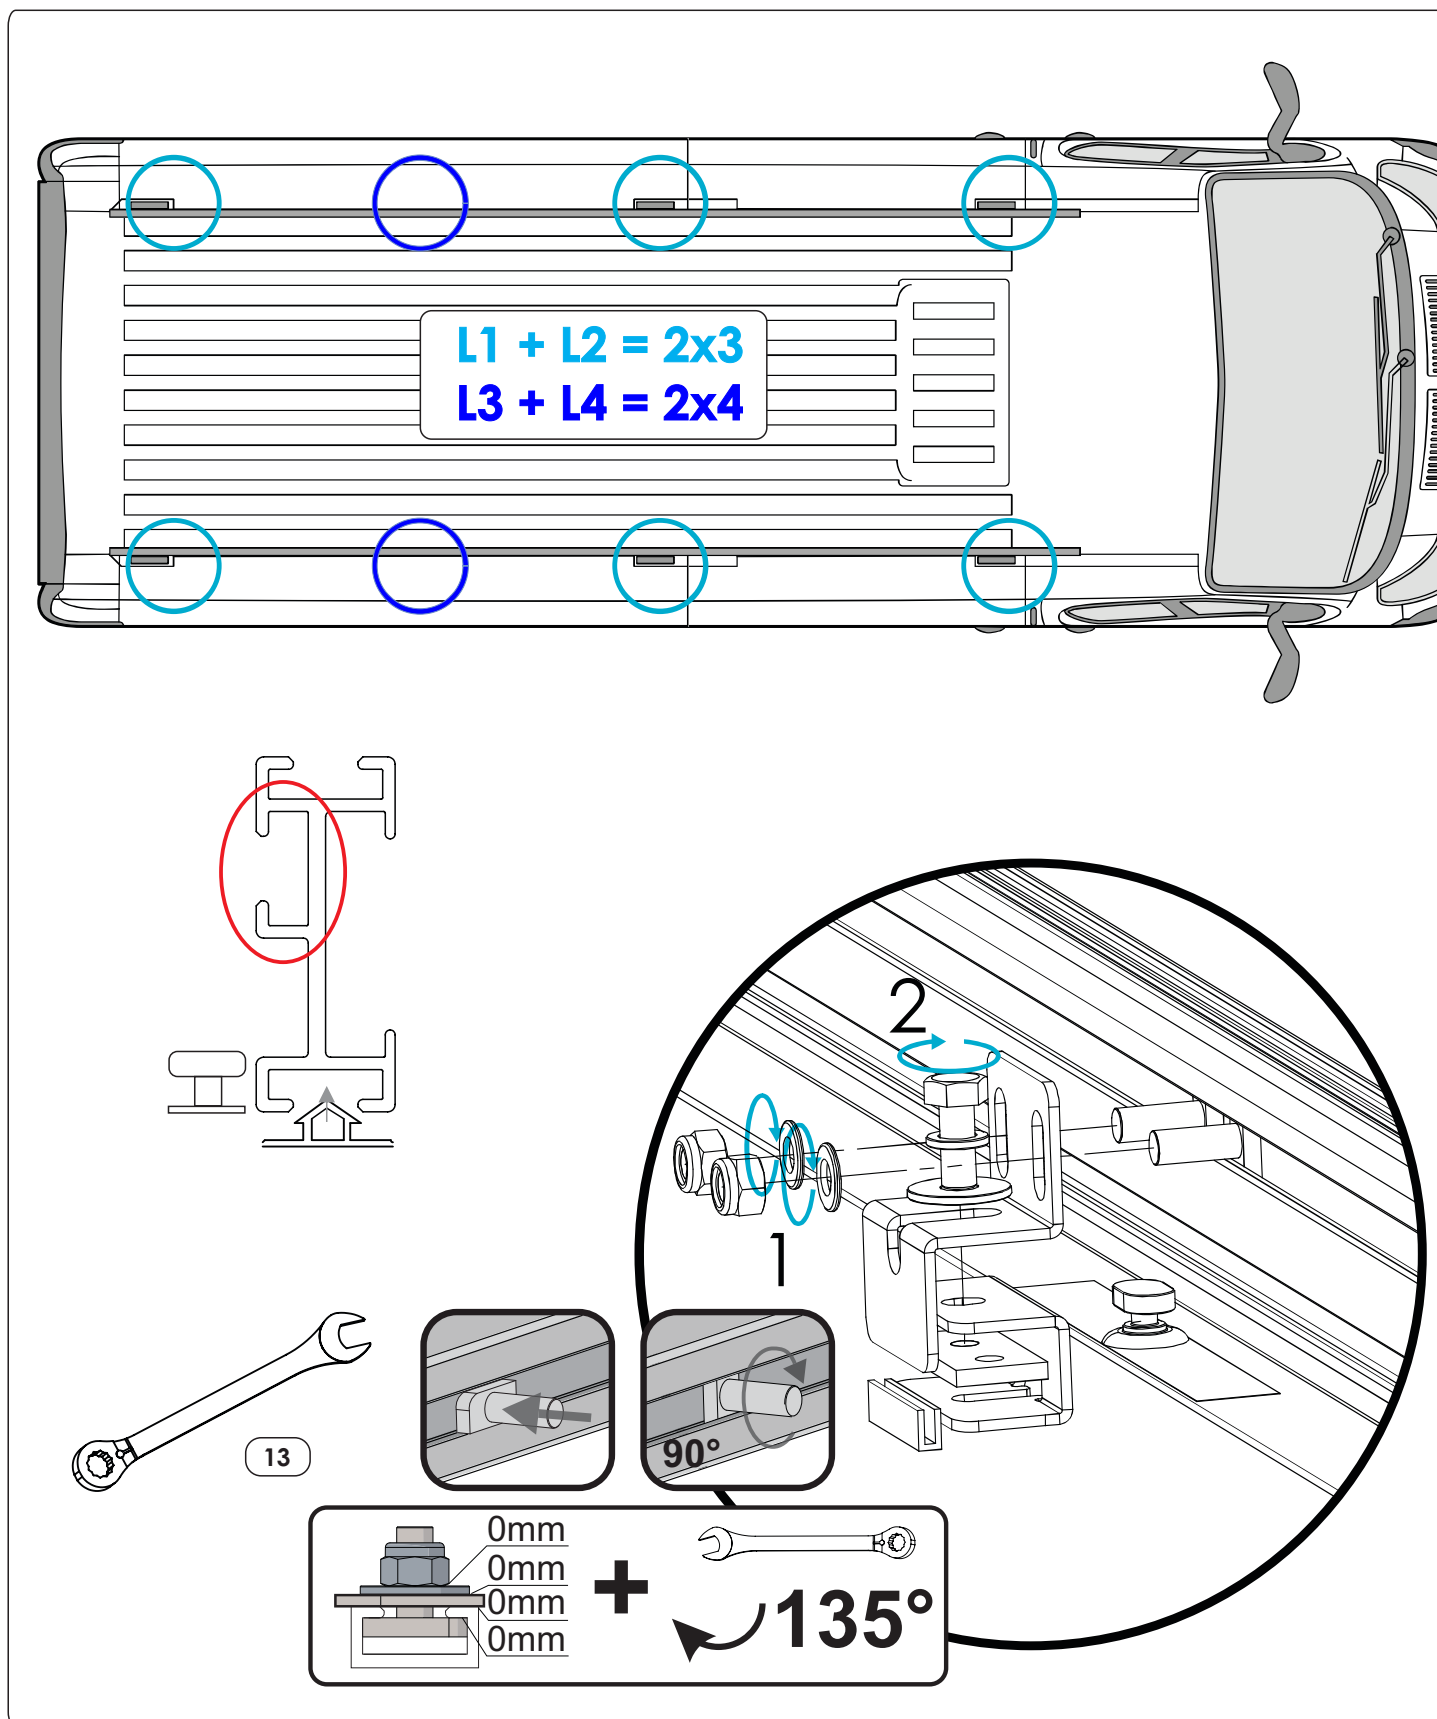

Citroën Jumper / Peugeot Boxer / Fiat Ducato  
Opel Movano > 2021

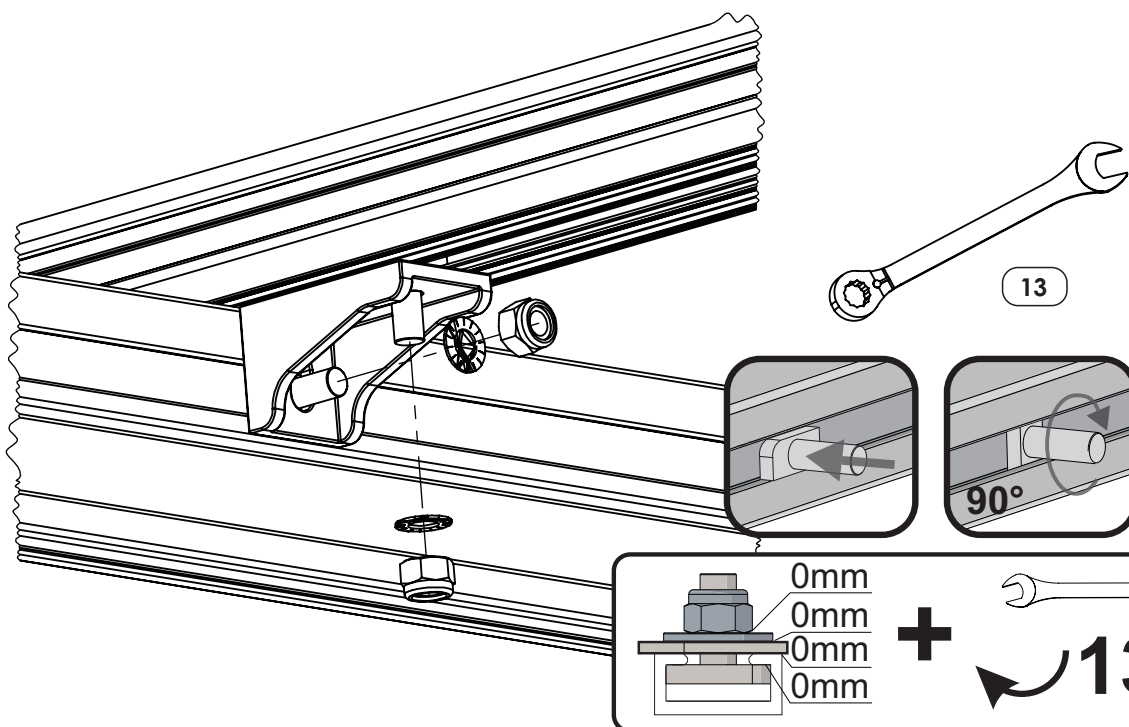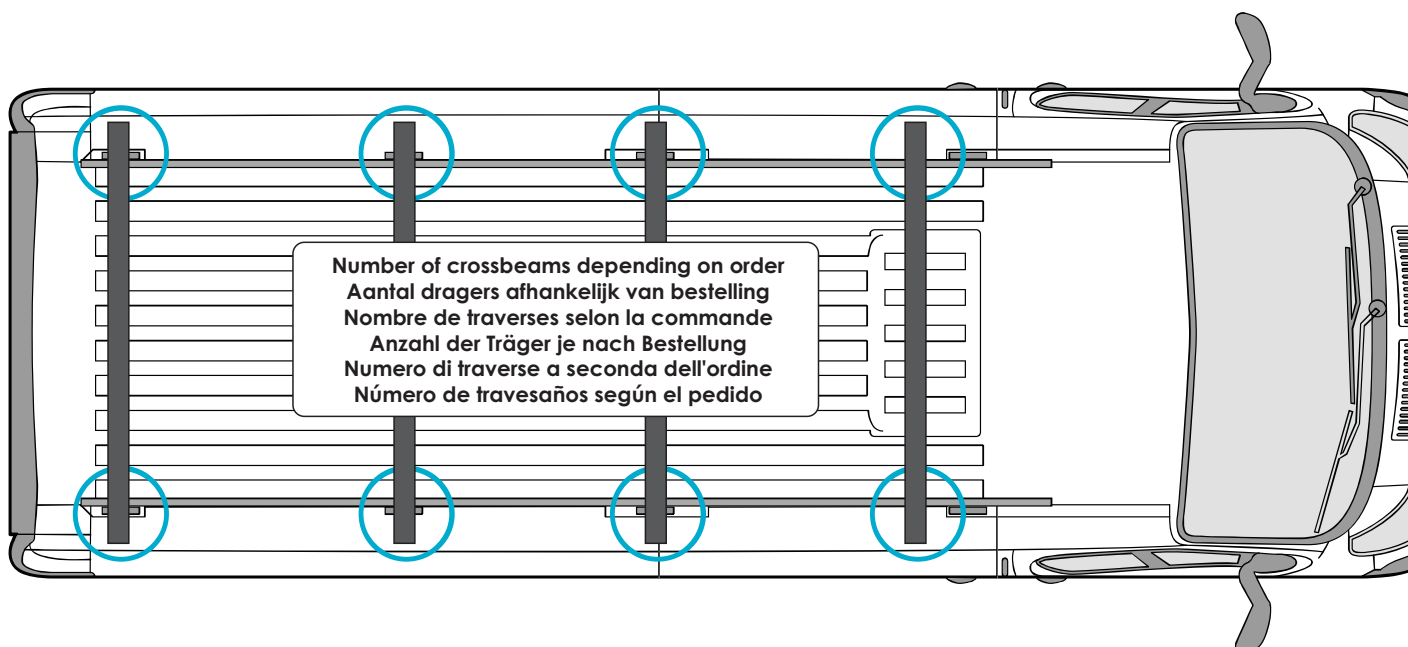

|                                 |       |                                     |     |
|---------------------------------|-------|-------------------------------------|-----|
| CODE<br>CODE<br>KODE<br>CÓ DIGO | LG145 | MODEL<br>MODÈLE<br>MODELL<br>MODELO | 130 |
|---------------------------------|-------|-------------------------------------|-----|

CITROËN JUMPER / PEUGEOT BOXER / FIAT DUCATO

